


RYNOQUIP

UL-1

1-TONNE UTILITY CRANE

SWL: 1000 kg
MAXIMUM RATED CAPACITY

LOAD CHART – FULLY EXTENDED OUTRIGGERS ON LEVEL GROUND

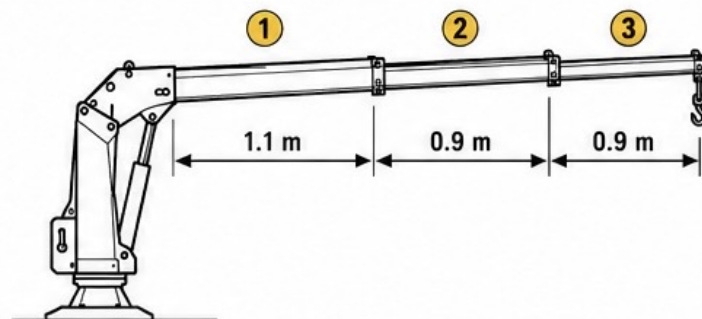

BOOM EXTENSIONS	
1	1.1 m SWL 1000 kg
2	0.9 m SWL 500 kg
3	0.9 m SWL 200 kg

LOAD CHART (MAXIMUM WORKING LOAD)				
BOOM POSITION	1 BASE BOOM ONLY	2 1ST EXTENSION ADDED	3 2ND EXTENSION ADDED	BEYOND EXTENSION 3 NOT PERMITTED
REACH (HORIZONTAL) FROM SLEW CENTRE	1.1 m	2.0 m	2.9 m	—
SWL (MAXIMUM CAPACITY)	1000 kg	500 kg	200 kg	—

- Rated loads are maximum allowable loads.
- Loads include weight of hook/blocks.
- Winch hook capacities are for vertical lift only.

- Do not exceed rated load at any radius.
- Crane must be mounted on a firm, level surface.
- Operator must read and understand the manual.

This chart is for general reference only. Actual capacity is limited by the crane and mounting. When in doubt, use less load.


RYNOQUIP

UL-2

2-TONNE UTILITY CRANE

SWL: 2000 kg
MAXIMUM RATED CAPACITY

LOAD CHART – HOOK / WINCH OPERATION

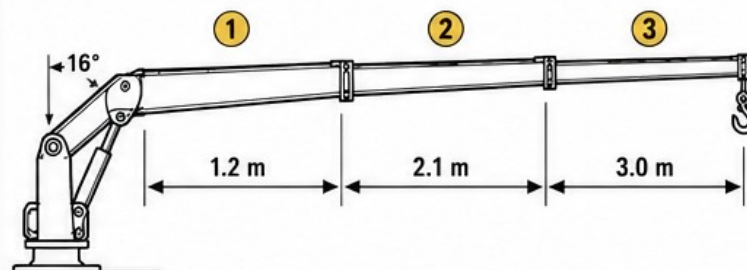

BOOM HOOK
(DIRECT LIFT)



WINCH HOOK
OVER ROLLER
(VERTICAL LIFT)

LOAD CHART (MAXIMUM WORKING LOAD)

BOOM POSITION	1 BASE BOOM ONLY	2 1ST EXTENSION ADDED	3 2ND EXTENSION ADDED	BEYOND EXTENSION 3 NOT PERMITTED
REACH (HORIZONTAL) FROM SLEW CENTRE	1.2 m	2.1 m	3.0 m	—
BOOM HOOK (DIRECT LIFT)	2000 kg	1000 kg	500 kg	—
WINCH HOOK OVER ROLLER (VERTICAL LIFT)	1000 kg	1000 kg	500 kg	—

- Rated loads are maximum allowable loads.
- Loads include weight of hook/blocks.
- Winch hook capacities are for vertical lift only.

- Do not exceed rated load at any radius.
- Crane must be mounted on a firm, level surface.
- Operator must read and understand the manual.

This chart is for general reference only. Actual capacity is limited by the crane and mounting. When in doubt, use less load.